

A930 RTX

Online cash register User manual

Онлайн контрольно-кассовая машина Руководство пользователя









Contents

Technical Specifications	18
Package Contents	20
Product Description	21
Power On	27
Installing the Receipt Tape	28
Card Reader	29
Contactless Payment via NFC	31
SIM Card, Memory Card	32
Device Care and Cleaning	32
Operating Recommendations	33
Power and Rattery Tins	3/4





Technical Specifications

▲ Android 12 ☐ HD Screen

○ PCIPTS 6XSerd ○ 2 Cameras

(A) Reliable Connection

Processor Octa-core Cortex A55 processor, 1.6 GHz +

dedicated security processor

Memory eMMC 16 GB + 2 GB DDR3 RAM

Additionally: eMMC flash memory 32 GB +

DDR4 RAM 3 GB

Additionally: eMMC flash memory 64 GB + DDR4 RAM 4 GB I Expanded microSD card

slot up to 128 GB

Card Readers Magnetic card / smart card reader /

Contactless card reader

Cameras Front camera: 5 megapixels · Rear camera:

8 megapixels

Autofocus with LED flashlight / reads 1D and 2D codes and barcodes

6.3-inch IPS display · HD 1440 x 720 pixels ·

Multi-touch

Connectivity 4G/3G/2G + Wi-Fi® 2.4 GHz

4G/3G/2G + Wi-Fi® 2.4 GHz Bluetooth® 4.2

Optional: 4G/3G/2G + Wi-Fi® 5 GHz/2.4

GHz + Bluetooth® 5.0

Power Supply 7.2V / 2600mAh Lithium-ion battery Power

supply 5.0 V. 2.0 A

Thermal Receipt Print speed: 80 mm/s
Printer Paper width: 58 mm

Paper width: 58 mm Diameter: 40 mm

Diameter: 40 mm

Display





Technical Specifications

SIM – SAM 1 slot for micro SIM cards, 2x slots for

SAM cards

or 1x slot for micro SIM cards + 1 mini SIM, 1 slot for SAM cards

(optional)

Geotargeting GPS / A-GPS / BeiDou / Glonass

Indicators 4 indicators for contactless transactions

/ Smart card reader indicator

Connection ports 1 USB "Type-C" Supports charging and

USB 2.0, OTG / 3.5 mm TRS jack (Audio Jack) 2-pin POGO contact

Dimensions and weight

 $L \times W \times H \text{ (mm)}$: 190 x 81 x 63 · Weight (g):

395 (including battery)

Certificates PCI PTS 6.x SRED | EMV L1 & L2 | EMV

Contactless L11 Visa payWave I MasterCard Contactless I UPI qUICS I Amex ExpressPay I Discover D-PAS I JCB J/Speedy I Interac Flash I TQM I CE I RoHS

I BQB I ABECS I Anatel I FCC I IC
Conclusion of the fiscal data operator
GNC and the Cybersecurity Center of
Software Products of the Republic of

Uzbekistan.

Certified software acquiring for

accepting cashless payments (UZCARD, HUMO, Mastercard, VISA, and UnionPay

International)





Package Contents



Standard Set

Online Cash Register Power Adapter USB Cable Battery User Manual

Check the components after unpacking. If any components are missing, contact the supplier.





Product description



Patent number P/N: 200312000000XXX

The official distributor in the Republic of Uzbekistan is

LLC "ARCA GROUP".

Address: Republic of Uzbekistan, Tashkent, Mirzo-Ulugbek District, MSG "Elobod", Mirzo-Ulugbek Street, 101A.


Support service +998 (78) 120-23-23 www.arca.uz

English





Front view

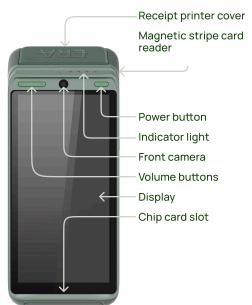

nglish





Rear view



English





Left side



24






Right side







Slots for the battery for SIM cards and Micro SD cards

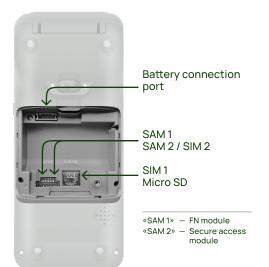

26





Power On



Press and hold the power button until the display lights up.

To turn off, press and hold the button; a menu will appear on the display. Select the desired action to shut down or restart the device.

Power Indicator

- Battery is in normal condition
- Power adapter connected
- Battery or charging error

Battery Charging

The battery is charging using the device's power adapter. The charging status will be displayed on the screen.

It is not recommended to leave the battery charging for more than 48 hours.





Installing the receipt roll

- 1. Open the printer cover;
- 2. Insert the receipt paper;
- Close the printer cover while holding the end of the receipt roll outside.

You can tear off the receipt roll by pulling the paper upwards along the cutting blade.



28





Card reader

Magnetic stripe cards:

- Insert the card from the left or right edge of the reader with the magnetic stripe facing down;
- 2. Smoothly swipe the card through the slot.

The card can be swiped in both directions.







Card reader

Chip cards:

- 1. Place the card chip side up
- 2. Insert the card into the slot until it stops
- 3. Follow the prompts on the display

After the payment is processed, you can remove the card







Contactless payment via NFC

Touch your card or device to the ERA logo located on the receipt printer cover.

Indicator for the contactless payment sensor



(i)) Symbol next to the ERA logo







SIM cards

To install the SIM card, open the battery cover on the back of the device.

Insert the SIM card into the slot and close the cover.

The battery can be lifted if necessary.

Micro SD card

You can install the memory card by opening the battery cover on the back of the device. Insert the MicroSD card into the appropriate slot. Close the battery cover.

Device care and cleaning

To clean the screen and body, use a slightly damp, soft, lint-free cloth.

Do not use abrasive materials, as they may damage the screen.

Do not immerse the online cash register in water or liquids. Do not spray water or cleaning agents into the reading device, card slots, or battery compartment.

nglish





Operating Recommendations

Third-party, non-original batteries may cause damage to the device or lead to fire hazards. Avoid exposing the device to direct sunlight, excessive dust, moisture, and heat. Do not place the device near electrical devices that may cause interference, such as microwave ovens and hair dryers. Avoid strong shaking or dropping of the device

For assistance and consultations, please contact technical support.

+998 (78) 120-23-23 www.arca.uz





Battery and Power Supply Tips

Use only the original battery and charger. Charging the battery for extended periods can reduce its lifespan. If the battery is rarely used, charge it every 6 months to prevent shortening its life. Replace the battery with a new one if it hasn't been used for 2 years. Dispose of the used battery properly.

Stop using the device if the battery is damaged. Do not expose the battery to direct sunlight, smoke, or dust. Avoid hitting the battery and do not place it in liquid or fire.

+998 (78) 120-23-23

Unified Call Center

Единый колл-центр